



# Neato Botvac 80 Rear Bumper Replacement

Use this prerequisite guide to remove the rear bumper.

Written By: Brandon Blank



## INTRODUCTION

This is a prerequisite guide to remove the rear bumper. Most repairs/ replacements will require you to remove the bumper and this guide will help you out.

## Step 1 — Rear Bumper



- Grab the rear bumper with both hands on either side.

## Step 2



- Gently pull the bumper down and back at an even pace.

To reassemble your device, follow these instructions in reverse order.